

# **AC ODOR SHIELD**

## **APPLICATION INSTRUCTIONS**

### **Materials Needed:**

- 1 Bottle, 4 fl. oz./118ml, AirSept® AC Odor Shield
- 1 Flexible Applicator Tool Assembly
- 1 Air Line Quick Connect Fitting



### **Applicator Tool Kit Assembly:**

Attach a compatible air line quick connect fitting to the air gun.

### **Application Instructions:**


When applicable, reference the appropriate Technical Service Bulletin for specific vehicle platform application instructions for AirSept® AC Odor Shield. For all other vehicles, the following application instructions should suffice.

The procedure takes about 1 hour, including drying and curing. However, actual labor only consumes, at most, 30 minutes.

*Please note that if you do not allow the proper time for drying and curing, the product will wash away with the condensate. This means that you may have a comeback within two weeks.*

1. Verify that the air conditioner drain hose is not clogged and place a drain pan beneath vehicle.
2. Verify that the plenum and evaporator leading edge is free of any debris.
3. Place a protective cover over the carpet just below the evaporator.
4. Remove cabin air filter and cover the opening prior to applying AirSept® AC Odor Shield, as the product may clog filter. (If cabin air filter appears to have little or no remaining useful life, suggest replacement to your customer).
5. If evaporator housing has a blower motor cooling tube, be careful **NOT TO SPRAY THE AC ODOR SHIELD DIRECTLY INTO BLOWER MOTOR COOLING TUBE.**
6. Remove A/C compressor fuse or unplug the connector to compressor clutch (fig. 1) **to ensure that the air conditioner's compressor will not engage.** (Compressor engagement will cause the evaporator to remain wet, and prevent full adherence of the coating to evaporator surfaces.)
7. Start the engine
  - A. Set a/c mode to RECIRCULATE/MAX and heat and fan on high.
  - B. Open one window about ½”.
  - C. Run the engine for approximately 20 minutes then shut off. (In this mode you are running hot air over the evaporator and drying it.
8. Shake the bottle of AirSept® AC Odor Shield well
  - A. Screw the bottle onto the cap on the tool's pick-up tube. (NOTE: The pick up tube is designed for 4 and 8 ounce bottles and should coil slightly in the bottom of a 4 ounce bottle.)
  - B. Attach Ulti-Flex Pressure Spray Tool to a compressed air line operating at 85 to 115 psi.

Fig. 1 Compressor connector

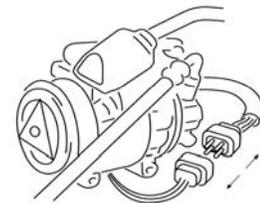


9. **USE ONE OF THE THREE FOLLOWING APPLICATION METHODS:**

A. Remove Blower Motor, see applicable service manual

- i. Clean any debris from the plenum and evaporator surface.
- ii. Apply AirSept® AC Odor Shield directly to the evaporator through the blower motor opening.
- iii. Use the flexible wand to direct product over the entire evaporator and surrounding gasket surfaces.
- iv. When the application is complete, reinstall the blower motor.

B. Remove Blower Resistor/Fin Sensor Access Panel, (fig. 2) or see applicable service manual


- i. Clean any debris from the plenum and evaporator surface.
- ii. Apply AirSept® AC Odor Shield directly to the evaporator through the blower resistor/fin sensor panel opening
- iii. Use the flexible wand to direct product over the entire evaporator and surrounding gasket surfaces.
- iv. Reinstall the blower resistor/fin sensor access panel, when the application is complete.

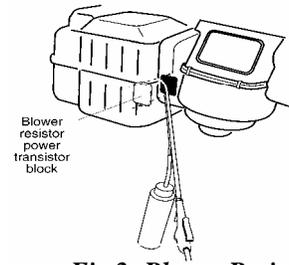

**Fig.2: Blower Resistor**

C. If neither of the previous two access options are available, drill a hole in the plenum.

- i. Drill a 1/2" hole in the plenum chamber between the blower motor and the evaporator (fig. 3). (CAUTION: Keep drill clear of evaporator core and fan).
- ii. With the vents closed and heat fan on HIGH, insert the tool into the hole and spray AC Odor Shield into the airstream toward the evaporator.
- iii. Use a manufacturer-approved RTV sealant to plug the hole.

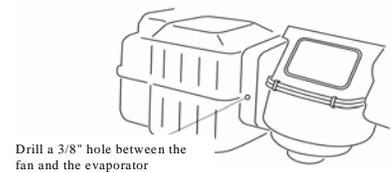

**Fig.3: Drill 3/8" Hole**

10. Run the engine for approximately 10 minutes with the compressor disabled, mode in RECIRCULATE/MAX, heat and fan on HIGH, and open one window approximately 1/2". (This cures the product onto the evaporator's surface.)
11. While the engine is running, rinse Ulti-Flex with warm water to prolong the life of the tool. Be sure to spray warm water through the nozzle to rinse out any residual product still in the capillary tube, otherwise it will dry and clog the tool. **Also, remove the small green valve from the bottle cap and rinse it thoroughly while rolling it between two fingers then reinstall it. If this valve is clogged, product will not flow through the tool.**
12. Shut off the engine.
  - A. Reconnect the compressor.
  - B. Test A/C operation.
13. Remove protective plastic coverings from inside the vehicle and remove drain pan placed beneath vehicle.
14. Reinstall cabin air filter.
15. Note AirSept® AC Odor Shield application date in service record sheet.

**Safety Precautions:**

- Keep out of reach of children.
- Avoid skin and eye contact.
- Wear safety glasses and gloves.
- Avoid breathing vapor.

**First Aid Instructions:**

- If skin contact occurs, wash with soap and water.
- If eye contact occurs, flush with clean water.
- Seek medical assistance when in doubt.